ABB Drives

User's Manual

Analogue I/O Extension Module
RAIO-01

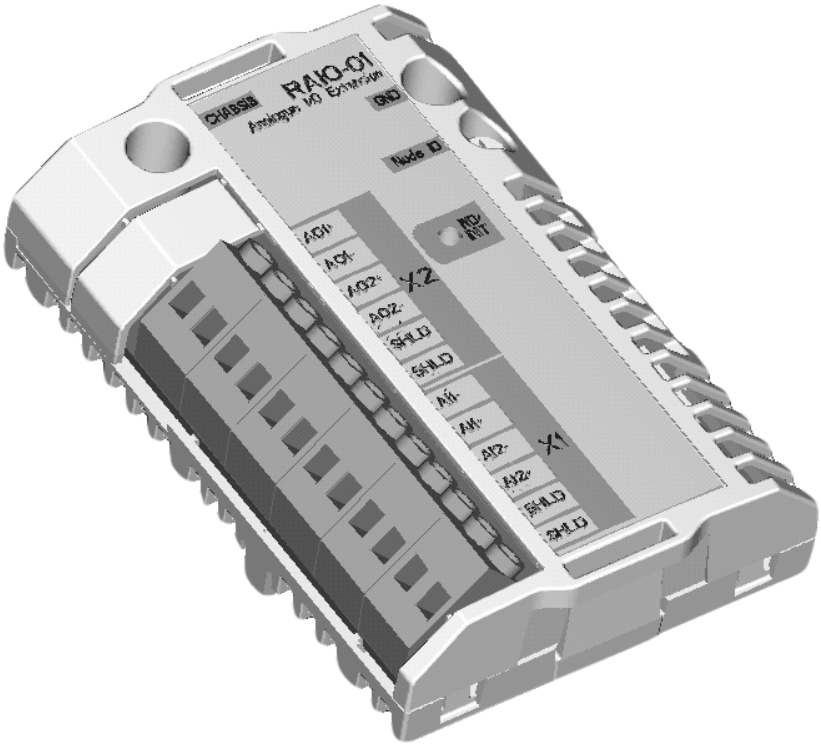

Analogue I/O Extension Module RAIO-01

User's Manual

3AFE 64484567 REV A EN

EFFECTIVE: 1.2.2002

© 2002 ABB Oy. All Rights Reserved.

Safety instructions

Overview

This chapter states the general safety instructions that must be followed when installing and operating the RAIO-01 Analogue I/O Extension module.

The material in this chapter must be studied before attempting any work on, or with, the unit.

In addition to the safety instructions given below, read the complete safety instructions of the specific drive you are working on.

General safety instructions

WARNING! All electrical installation and maintenance work on the drive should be carried out by qualified electricians only.

The drive and adjoining equipment must be properly earthed.

Do not attempt any work on a powered drive. After switching off the mains, always allow the intermediate circuit capacitors 5 minutes to discharge before working on the frequency converter, the motor or the motor cable. It is good practice to check (with a voltage indicating instrument) that the drive is in fact discharged before beginning work.

The motor cable terminals of the drive are at a dangerously high voltage when mains power is applied, regardless of motor operation.

There can be dangerous voltages inside the drive from external control circuits even when the drive mains power is shut off. Exercise appropriate care when working on the unit. Neglecting these instructions can cause physical injury or death.

Table of contents

Safety instructions

Overview iii
General safety instructions iii

Table of contents

Chapter 1 – Introduction

Intended audience 1-1
Before you start 1-1
What this manual contains 1-2

Chapter 2 – Overview

Overview 2-1
The RAIO-01 module 2-1
  Module layout 2-1
  Delivery check 2-2
  Compatibility 2-2
  Warranty and liability information 2-2

Chapter 3 – Installation

Mounting 3-1
Removing and refitting the cover of the enclosure 3-2
Switches 3-2
Input mode selection 3-3
Input signal type selection 3-4
Terminal designations 3-5
Wiring 3-6
Node ID selection 3-7
Programming 3-7

Chapter 4 – Fault tracing

Status LED 4-1
Option slot installation 4-1
I/O Module Adapter installation 4-1

Appendix A – Technical data

Chapter 1 – Introduction

Intended audience

The manual is intended for the people who are responsible for commissioning and using an RAIO-01 Analogue I/O Extension module with the ACS 800 drive. The reader is expected to have a basic knowledge of electrical fundamentals, electrical wiring practices and how to operate the drive.

Before you start

It is assumed that the drive is installed and ready to operate before starting the installation of the extension module.

In addition to conventional installation tools, have the drive manuals available during the installation as they contain important information not included in this manual. The drive manuals are referred to at various points of this document.

What this manual contains

This manual contains information on the wiring, configuration and use of the RAIO-01 module.

Safety instructions are featured in the first few pages of this manual.

Chapter 2 – Overview contains a short description of the RAIO-01 Analogue I/O Extension module, a delivery checklist and warranty information.

Chapter 3 – Installation contains instructions for module hardware settings, mounting and cabling.

Chapter 4 – Fault tracing explains fault tracing and the LED indications of the RAIO-01 module.

Appendix A contains technical data.

Chapter 2 – Overview

Overview

This chapter contains a short description of the Analogue I/O Extension module, a delivery checklist and warranty information.

The RAIO-01 module

The RAIO-01 Analogue I/O Extension module offers two bipolar current (±0[4]…20 mA) or voltage (±0[2]…10 V or ±0…2 V) inputs and two unipolar current (0[4]…20 mA) outputs with 12-bit resolution. The analogue inputs and outputs are galvanically isolated as a group from each other and the power supply.

Module layout

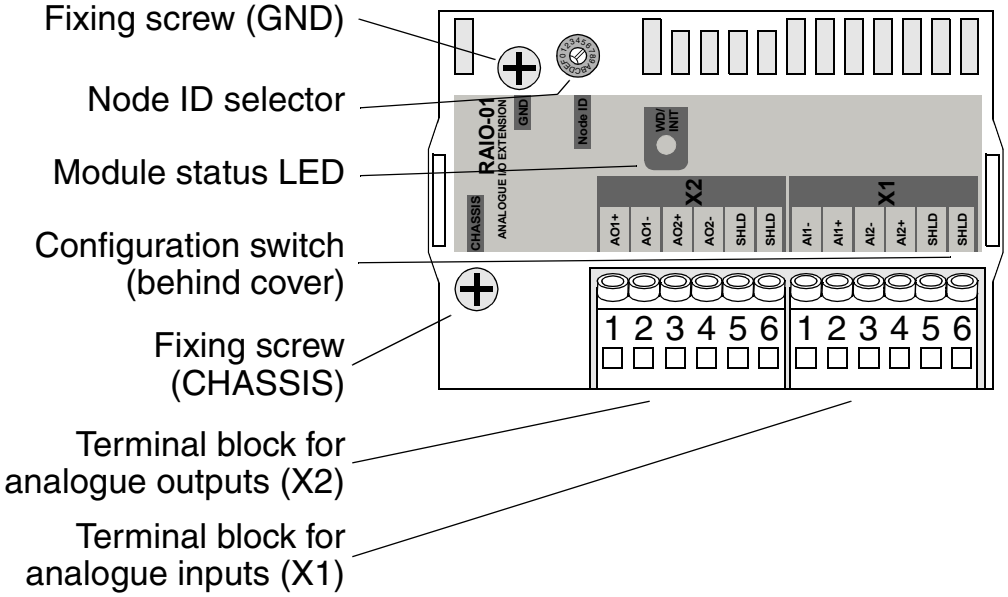

Figure 2-1 Module layout

Delivery check

The option package contains:

- RAIO-01 module
- Two screws (M3×8 mm)
- This manual.

Compatibility

The RAIO-01 is compatible with the ACS 800 Standard Application Program version ASXR7000 or later.

Warranty and liability information

The warranty for your ABB drive and options covers manufacturing defects. The manufacturer carries no responsibility for damage due to transport or unpacking.

In no event and under no circumstances shall the manufacturer be liable for damages and failures due to misuse, abuse, improper installation, or abnormal conditions of temperature, dust, or corrosives, or failures due to operation above rated capacities. Nor shall the manufacturer ever be liable for consequential and incidental damages.

The period of manufacturer's warranty is 12 months, and not more than 18 months, from the date of delivery. Extended warranty may be available with certified start-up. Contact your local distributor for details.

Your local ABB Drives company or distributor may have a different warranty period, which is specified in their sales terms, conditions, and warranty terms.

If you have any questions concerning your ABB drive, contact your local distributor or ABB Drives office.

The technical data and specifications are valid at the time of printing. ABB reserves the right to subsequent alterations.

Chapter 3 – Installation

WARNING! Follow the safety instructions given in this guide and in the *ACS 800 Hardware Manual.*

Mounting

The RAIO-01 is to be inserted into the position marked SLOT 1 or SLOT 2 on the drive. The module is held in place with plastic retaining clips and two screws. The screws also provide the earthing of the I/O cable shield connected to the module, and interconnect the GND signals of the module and the RMIO board.

On installation of the module, the signal and power connection to the drive is automatically made through a 38-pin connector.

The module can alternatively be mounted on a DIN rail-mountable AIMA-01 I/O Module Adapter (*not available at the time of publication*).

Mounting procedure:

1. Insert the module carefully into SLOT 1 or SLOT 2 on the RMIO board until the retaining clips lock the module into position.
2. Fasten the two screws (included) to the stand-offs.
3. Remove the cover of the module enclosure – directions are given below.
4. Set the configuration DIP switches of the module to the required position and refit the cover.

Note: Correct installation of the screws is essential for fulfilling the EMC requirements and for proper operation of the module.

Removing and refitting the cover of the enclosure

To choose operating mode and input signal type, the cover of the module enclosure must be removed. This can be done by carefully bending the two cover retaining clips with a small screwdriver (see Figure 3-1) and lifting the cover off.

Refit the cover by pushing it back into its place until the retaining clips lock it into position.

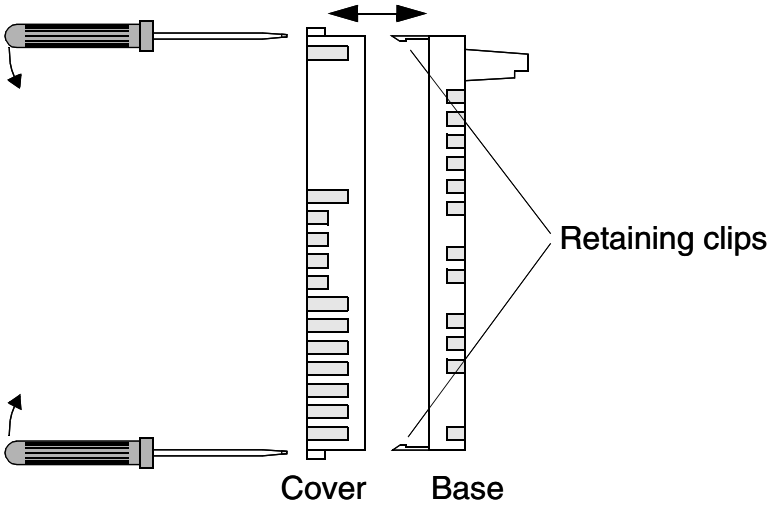

Figure 3-1 Removing and refitting the cover

Switches

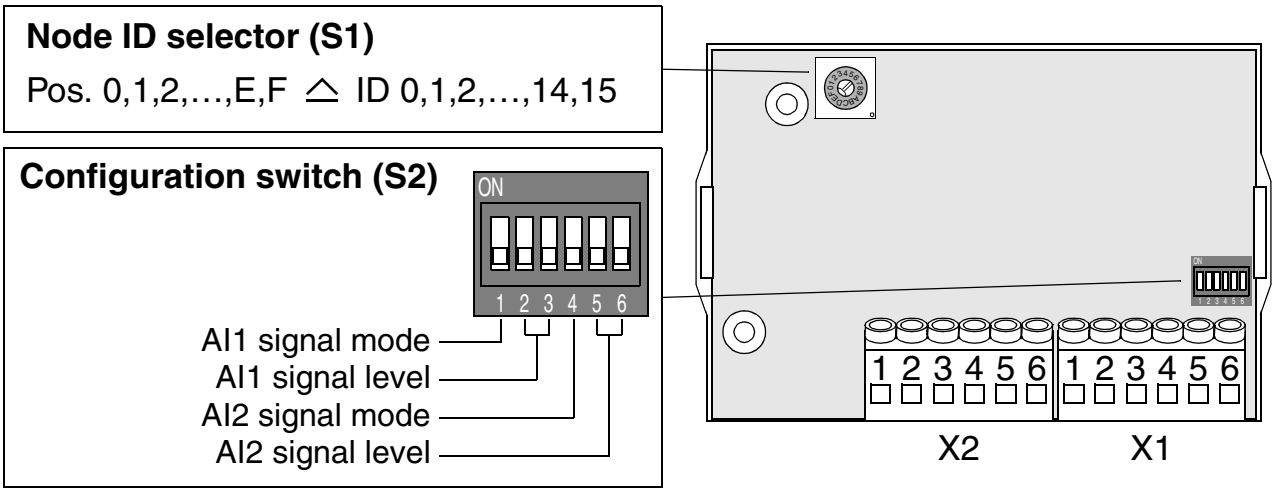

Figure 3-2 Top view of the module, cover removed

Input mode selection

The operating mode of the analogue inputs can be selected using the configuration DIP switch (S2) on the circuit board of the module. The drive parameters must be set accordingly.

In bipolar mode, the analogue inputs can handle positive and negative signals. The resolution of the A/D conversion is 11 data bits (+ 1 sign bit). The way the drive interprets the negative range of the inputs depends on the settings of the drive. See the *Firmware Manual* of the drive.

In unipolar mode (default), the analogue inputs can handle positive signals only. The resolution of the A/D conversion is 12 data bits.

DIP switch setting		**Input signal type**
Analogue input AI1	**Analogue input AI2**	
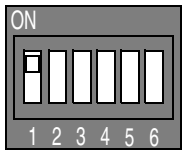	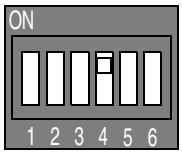	±0(4)…20 mA ±0(2)…10 V ±0…2 V
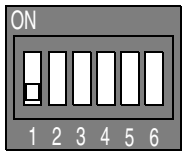	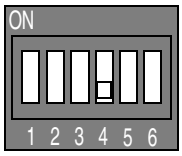	0(4)…20 mA 0(2)…10 V 0…2 V (Default)

Input signal type selection

Each input can be used with a current or voltage signal. The selection is made with the configuration DIP switch (S2) on the circuit board of the module.

Input signal type	DIP switch settings	
	Analogue input 1	Analogue input 2
Current signal ±0(4)…20 mA (Default)	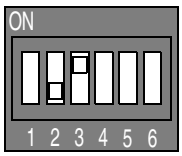	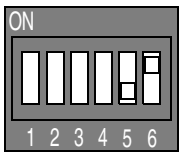
Voltage signal ±0(2)…10 V	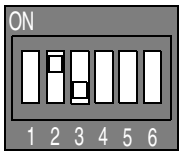	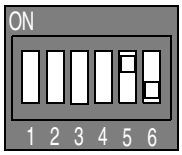
Voltage signal ±0…2 V	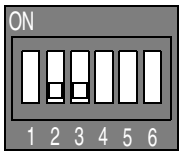	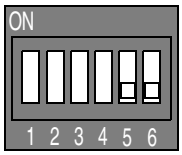

Terminal designations

The RAIO-01 is equipped with two 6-pole non-detachable screw-type connectors. Terminal block X1 provides the connection for the analogue input signals, and X2 provides the connection for the analogue output signals. Each terminal block includes two terminals for the cable shield (see also Figure 3-3).

X1	Marking	Description		
1	AI1-	Analogue input 1	Current signal ±0(4)…20 mA Input impedance 100 Ω Galvanically isolated as a group (1.5 kV AC, 1 minute) from the analogue outputs, power supply and earth.	Voltage signal ±0(2)…10 V or ±0…2 V Input impedance 200 kΩ Galvanically isolated as a group (1.5 kV AC, 1 minute) from the analogue outputs, power supply and earth.
2	AI1+			
3	AI2-	Analogue input 2		
4	AI2+			
5	SHLD	Cable shield AC earthing. Connected via an RC circuit to the frame.		
6	SHLD			

X2	Marking	Description	
1	AO1+	Current output 1	Current signal 0(4)...20 mA Load resistance max. 700 Ω Galvanically isolated as a group (1.5 kV AC, 1 minute) from the analogue inputs, power supply and earth.
2	AO1-		
3	AO2+	Current output 2	
4	AO2-		
5	SHLD	Cable shield AC earthing (via an RC circuit to the frame).	
6	SHLD		

Wiring

0.5 to 1.5 mm^2 twisted pair cable with individual and/or overall shields should be used for analogue signals. The shields should be connected to the SHLD terminals on the RAIO-01 module. See the example below.

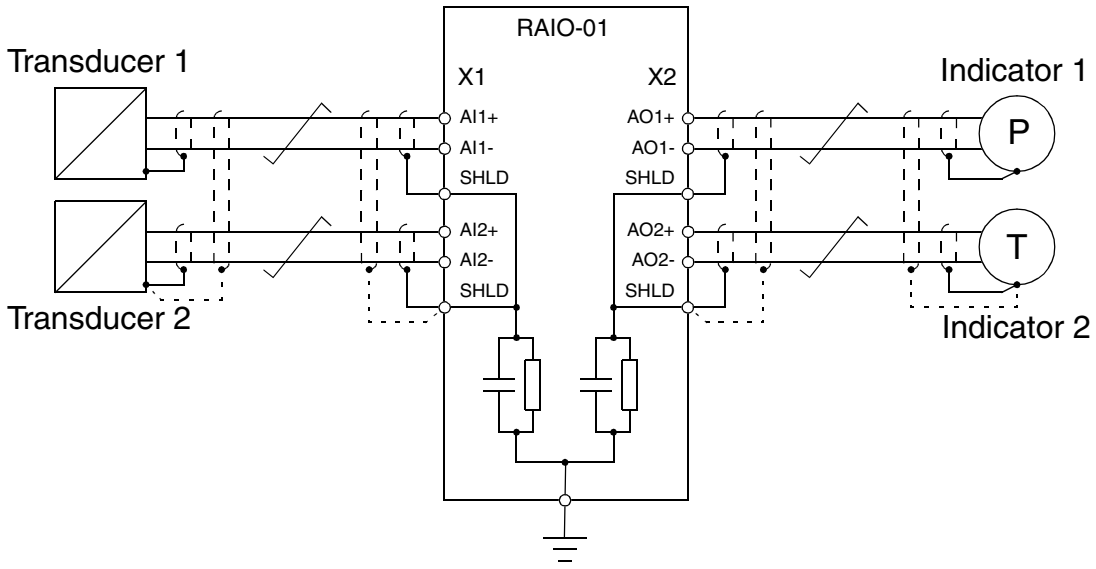

Figure 3-3 Wiring example

Note: If the transducers or indicators are located far away from each other, earth the shield at one unit through a capacitor (e.g. 10 nF/400 V) to avoid circulating earth current flow.

Note: X1 and X2 have separate RC circuits as shown above, i.e. the SHLD terminals on one terminal block are connected together and earthed through a common RC circuit.

Node ID selection

If the RAIO-01 module is mounted onto the external I/O Module Adapter (AIMA-01), choose the proper node ID for the module using the node ID selector (S1, range 1…15). Setting the node ID is not required when the module is mounted into SLOT 1 or SLOT 2 on the drive.

The default setting of selector S1 is 5.

Programming

The communication between the module and the drive is activated by a drive parameter. (Ensure that the parameter settings correspond to the mode switch setting of the module.) The RAIO-01 can replace and/or extend certain standard inputs and outputs. See the drive *Firmware Manual*, Parameter Group 98.

Note: The new settings take effect only when the module is powered up.

Chapter 4 – Fault tracing

Status LED

There is one status LED (WD/INIT, yellow) on the RAIO-01 module. The LED is lit when the drive is configuring the module at power-up.

Option slot installation

In case the LED does not go out after one second:

- The configuration has failed.
  - Cycle the power supply of the drive.
- The module has a hardware failure.
  - Ensure the 38-pin connector is properly inserted.
  - Contact an ABB service representative.

I/O Module Adapter installation

- There is no communication with the drive.
  - Check that the drive is powered.
  - Check the module node ID.
  - Check that the fibre optic cables are connected correctly (transmitters to receivers) and the connectors properly inserted.
  - Check the fibre optic cables visually for dirt or flaws.
  - Ensure the 38-pin connector is properly inserted.
  - Try new fibre optic cables.
  - Contact an ABB service representative.

Appendix A – Technical data

Dimensions:

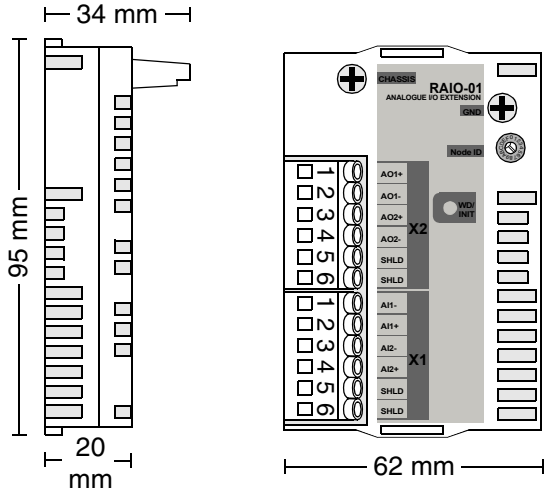

Mounting: Into an option slot of the RMIO board of the drive or onto external I/O Module Adapter (AIMA-01).

Degree of protection: IP 20

Ambient conditions: The applicable ambient conditions specified for the drive in its *Hardware Manual* are in effect.

Hardware settings:

- Rotary switch for node ID selection (range 1…15)
- One DIP switch per input for selection between bipolar mode (default) and unipolar mode
- Two DIP switches per input for signal type and level selection

Connectors:

- 38-pin parallel bus connector
- Two 6-pin screw-type terminal blocks for max. 2.5 mm^2 wires, non-detachable

Analogue inputs:

- Signal types: ±(0)4…20 mA, ±(0)2…10 V, ±0…2 V
- Input impedance: 100 Ω (current), 200 kΩ (voltage)
- Resolution in unipolar mode: 0.024% (12 data bits)
- Resolution in bipolar mode: 0.048% (11 data bits + sign)
- Inaccuracy: ±0.5% (Full Scale Range) at 25 °C
  Temperature coefficient: ±100 ppm/°C max.
- Isolated from the analogue outputs, power supply and earth. Test voltage: 1.5 kV AC, 1 minute
- Common mode voltage: ±15 V max.
- HW filtering: 2 ms approx.

Analogue outputs:

- Signal type: 0(4)...20 mA
- Load resistance max.: 700 Ω
- Resolution: 0.024% (12 bits)
- Inaccuracy: ±0.5% (Full Scale Range) at 25 °C
  Temperature coefficient: ±100 ppm/°C max.
- Isolated from the analogue inputs, power supply and earth. Test voltage: 1.5 kV AC, 1 minute

General

- Max. power consumption:
  100 mA (5 V) + 120 mA (24 V)
  Both voltages supplied by the RMIO board
- Estimated min. lifetime: 100 000 h
- All materials UL/CSA-approved
- Complies with EMC standards EN 50081-2 and EN 50082-2

RAIO-01
3AFE 64484567 REV A EN
EFFECTIVE: 1.2.2002

ABB Oy
AC Drives
P.O. Box 184
FIN-00381 Helsinki
FINLAND
Telephone: +358 10 22 11
Fax: +358 10 222 2681
Internet: www.abb.com

ABB Inc.
Drives & Power Products
16250 West Glendale Drive
New Berlin, WI 53151
USA
Telephone: 262 785-8378
800 243-4384
Fax: 262 780-5135